



# MANUAL

Please read this instruction carefully before use



# Contents

---

<b>1. Specifications.....</b>	<b>3</b>
<b>2. Appearance.....</b>	<b>4</b>
<b>3. Attention.....</b>	<b>5</b>
<b>4. How to play.....</b>	<b>7</b>
<b>5. Package Part.....</b>	<b>7</b>
<b>6. Set.....</b>	<b>8</b>
<b>7. Board wire.....</b>	<b>13</b>
<b>8. How to change music.....</b>	<b>16</b>
<b>9. Error Code.....</b>	<b>17</b>

# 1. Specifications

<b>Voltage</b>	110V AC $\pm$ 10% 7.0A. 220V AC $\pm$ 10% 4.0A. 50/60 Hz. (Note: Please refer to the label on the game for the actual voltage.)
<b>Power</b>	600W
<b>Size</b>	L800*W554*H1730mm
<b>Weight</b>	150KG
<b>Texture</b>	Wood + plastic + metal
<b>Power box</b>	48V ~10.4
<b>Power box</b>	5v~3A                      12v~12A



## 2. Appearance



Open the door, there are counters, reset key.  
Every time after replenishment the gift NEED to press the reset key .

Bill machine

Ball plate  
Choose gift key

Coin selector  
LCD display  
Start button  
Replenish capsule toy

Gift Box

Capsule Exit



### 3. Attention WARNING




**The machine is designed for indoor use only.**

**Never install this machine outdoors or in any of the following**

- Locations exposed to direct sunlight
- Locations subject to rain or water leakage.
- Unstable locations or locations subject to vibration.
- Dusty, hot, or damp locations.


#### **Game Leveling:**

Install this machine on a flat surface. Make sure that the machine is level with the floor. If the machine is not level, the game may not play well.

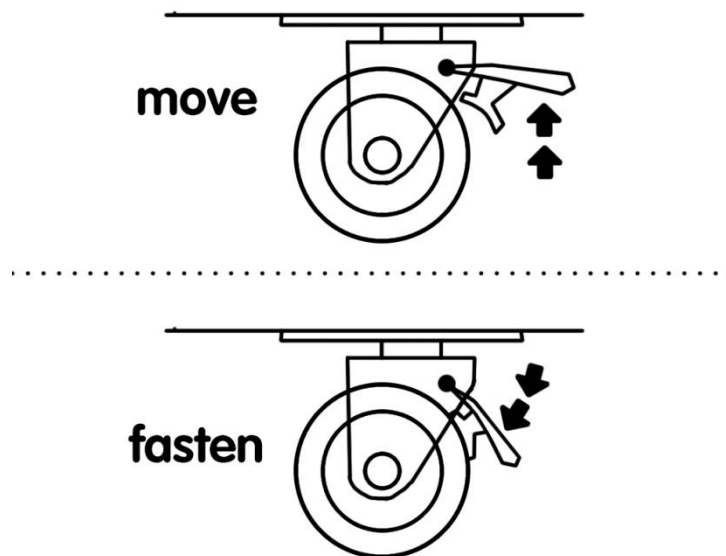

- ◆ Disconnect game power before moving
- ◆ Make sure all wheels are intact. Replace any wheels that are damaged or broken before moving the game.
- ◆ When moving the game, DO NOT slide the game across the floor
- ◆ Ensure the game is level before connecting the power.


#### **Connecting the power cord:**

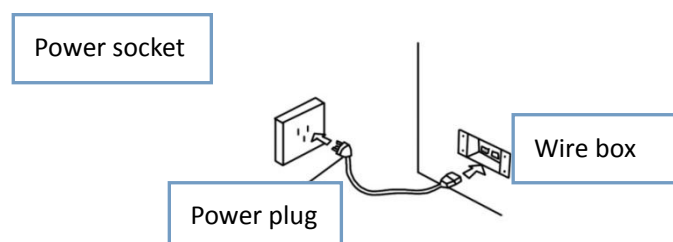




## WARNING


- Do not put heavy items on power cord.

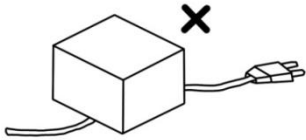


- Hold the power plug instead of the wire to draw the power cord out of the socket.

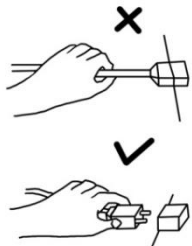

- Do not touch the power plug with wet hands.

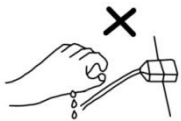

- Do not draw or twist the cord or near a heat source.
- Do not place the cord where the player can easily trip over or come in contact with it.

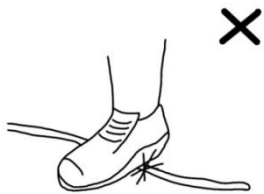

- Operate this game with the correct power and fuse configuration. (The machine's supply Voltage is 110VAC or 220VAC, if not, it can cause an electric shock or malfunction.)

## 4. How to play



1. Press the choose gift key to select the gift you like.
2. Put in tokens and start the game.
3. The fairway began to swing. When you press the start button, the ball will fall. When the number of balls accumulated reaches the specified target, the gift is obtained.

### Note :


1. That the game fails when the hole has a duplicate ball
2. When you are one ball short of the target ball, you can continue to insert a coin to choose the challenge. If you do not challenge at this point, you can get a small capsule toy.

## 5 Package Part

Check the parts list before installation. Verify that all parts match the list and in good condition.

NO.	Name	PCS	Type/Model	Picture
1	Power line	1		
2	Key	3	818	
3	Instructions	1		

# 6. Set

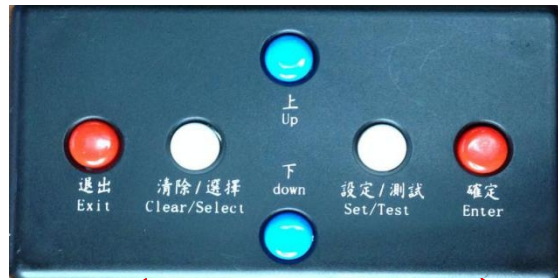






(Operating handle)

Press  enter background settings.



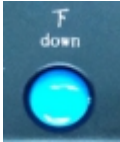


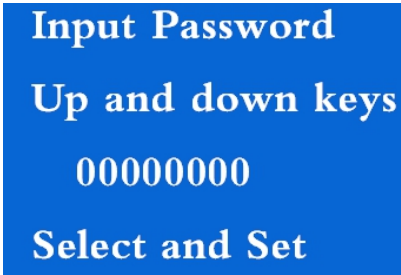

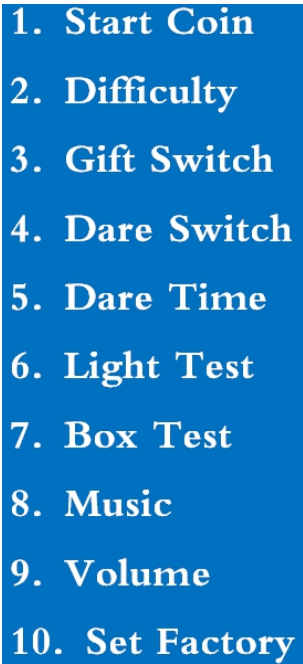
- 1: Account
- 2: Settings
- 3: Password
- 4: Version

## 6.1 Account

1	Press	
2	Press   enter account item.	<b>1: Account</b>
3	Press   Can view the account details of each gift box.	<b>01 Box : 00000</b> <b>Gifts : 00000</b> <b>Capsule : 00000</b> <b>Select and Set</b>













## 6.2 Parameter setting



1	Get into	
2	Press   enter item	
3	Get into	
4	Screen prompt for password	
5	When the input is complete, press	
6	You can view the main interface for parameter settings	

6.2.1 Press  each item that enters the parameter setting separately and adjust.

**(Note: use of reference handle schematics)**

Function	View	Instructions
<p><b>1. Start Coin</b></p>	<p>1 Start Coin 1-10 Coin 1 First Clear Acct</p>	<p>The number of startup coins is 1-10 optional. Press   To adjust the amount. Press   To choose the gift box number</p>
<p><b>2. Difficulty</b></p>	<p>1NUM Difficult 05-09 05 First Clear Acct</p>	<p>Game difficulty adjustment has 5-9 level. The bigger the number, the harder it is to win. Press   To Modify the data</p>
<p><b>3. Gift Switch</b></p>	<p>Gift Switch Close Open</p>	<p>Turn on or off the function for give Capsule toy Press   To choose mode</p>
<p><b>4. Dare Switch</b></p>	<p>Challenge Switch Close Open</p>	<p>Turn on or off the function for challenge Press   To choose mode</p>





<p><b>5. Dare Time</b></p>	<p><b>Challenge Time</b>  <b>10–20 Second</b>  <b>15</b></p>	<p>Challenge time can set 10 - 20          Press   To adjustment parameter</p>
<p><b>6. Light Test</b></p>	<p><b>Light Board Test</b>  <b>Close</b>  <b>Open</b></p>	<p>Select "Open", the LED light and the digital tube will light up in turn. Can check the light and digital tube is normal.</p>
<p><b>7. Box Test</b></p>	<p><b>Gift Box Test</b>  <b>Current State:</b>  <b>Stop</b></p> <p><b>Gift Box Test</b>  <b>Current State:</b>  <b>Box Test</b>  <b>OK</b></p>	<p>You can open the grid directly, or test the grid is good or bad.</p> <p>When choose the test gift box, the gift box door will be opened in turn.</p> <p>When the 12-case gift box is opened, the small LCD will display the word OK.</p> <p>If the number is displayed, the corresponding gift box door is not connected or the lock is out of order.</p>
<p><b>8. Music</b></p>	<p><b>Standby Sound</b>  <b>5–20 Minute</b>  <b>Close Open</b>  <b>5</b></p>	<p>Music playing time: 5 minutes, 10 minutes, 15 minutes, 20 minutes, always turn off, always turn on.</p> <p>If 5 minutes is selected, music will stop playing after 5 minutes, and play again after 5 minutes, and so on.</p>







<p><b>9. Volume</b></p>	<p><b>Volume Ste</b> <b>Volume 1-30</b> <b>20</b></p>	<p>Volume adjustment can be directly adjusted in the background, there are 0-30 values optional. 0 for mute, the larger the number, the volume is higher, the maximum is 30.</p>
<p><b>10. Set Factory</b></p>	<p><b>Account Clear</b> <b>Sure press Enter</b> <b>CL press Exit</b></p> <p><b>Account Clear</b> <b>Sure press Enter</b> <b>CL press Exit</b> <b>Succeed Clear</b></p>	<p>The account is cleared, and the key can be cleared by pressing the Enter key. Press the Exit key to exit the menu.</p>

### 6.3 Password change


<p>1</p>	<p><b>Get into</b></p>	
<p>2</p>	<p>Press   into Password change.</p>	<p><b>3: Password</b></p>

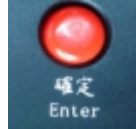



3	<b>Get into</b>	
4	<b>Password change interface</b>	<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Input Password</b>  <b>Up and Down Keys</b>  <b>0000000</b>  <b>Select and Set</b> </div>
5	<b>When you have entered the old password, click</b>	
6	<b>New password interface</b>	<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Password Set</b>  <b>New Password</b>  <b>1000000</b>  <b>Up Down Select Set</b> </div>
7	<b>When you have entered a new password, click</b>	
8	<b>Again input new password interface</b>	<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Password Set</b>  <b>Re New Password</b>  <b>1000000</b>  <b>Up Down Select Set</b> </div>
9	<b>When the input is complete, press</b>	
10	<b>This interface indicates successful password modification</b>	<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Password Set</b>  <b>Password Success</b>  <b>1000000</b>  <b>Up Down Select Set</b> </div>

# 7. Board wire

## 7.1 Main board

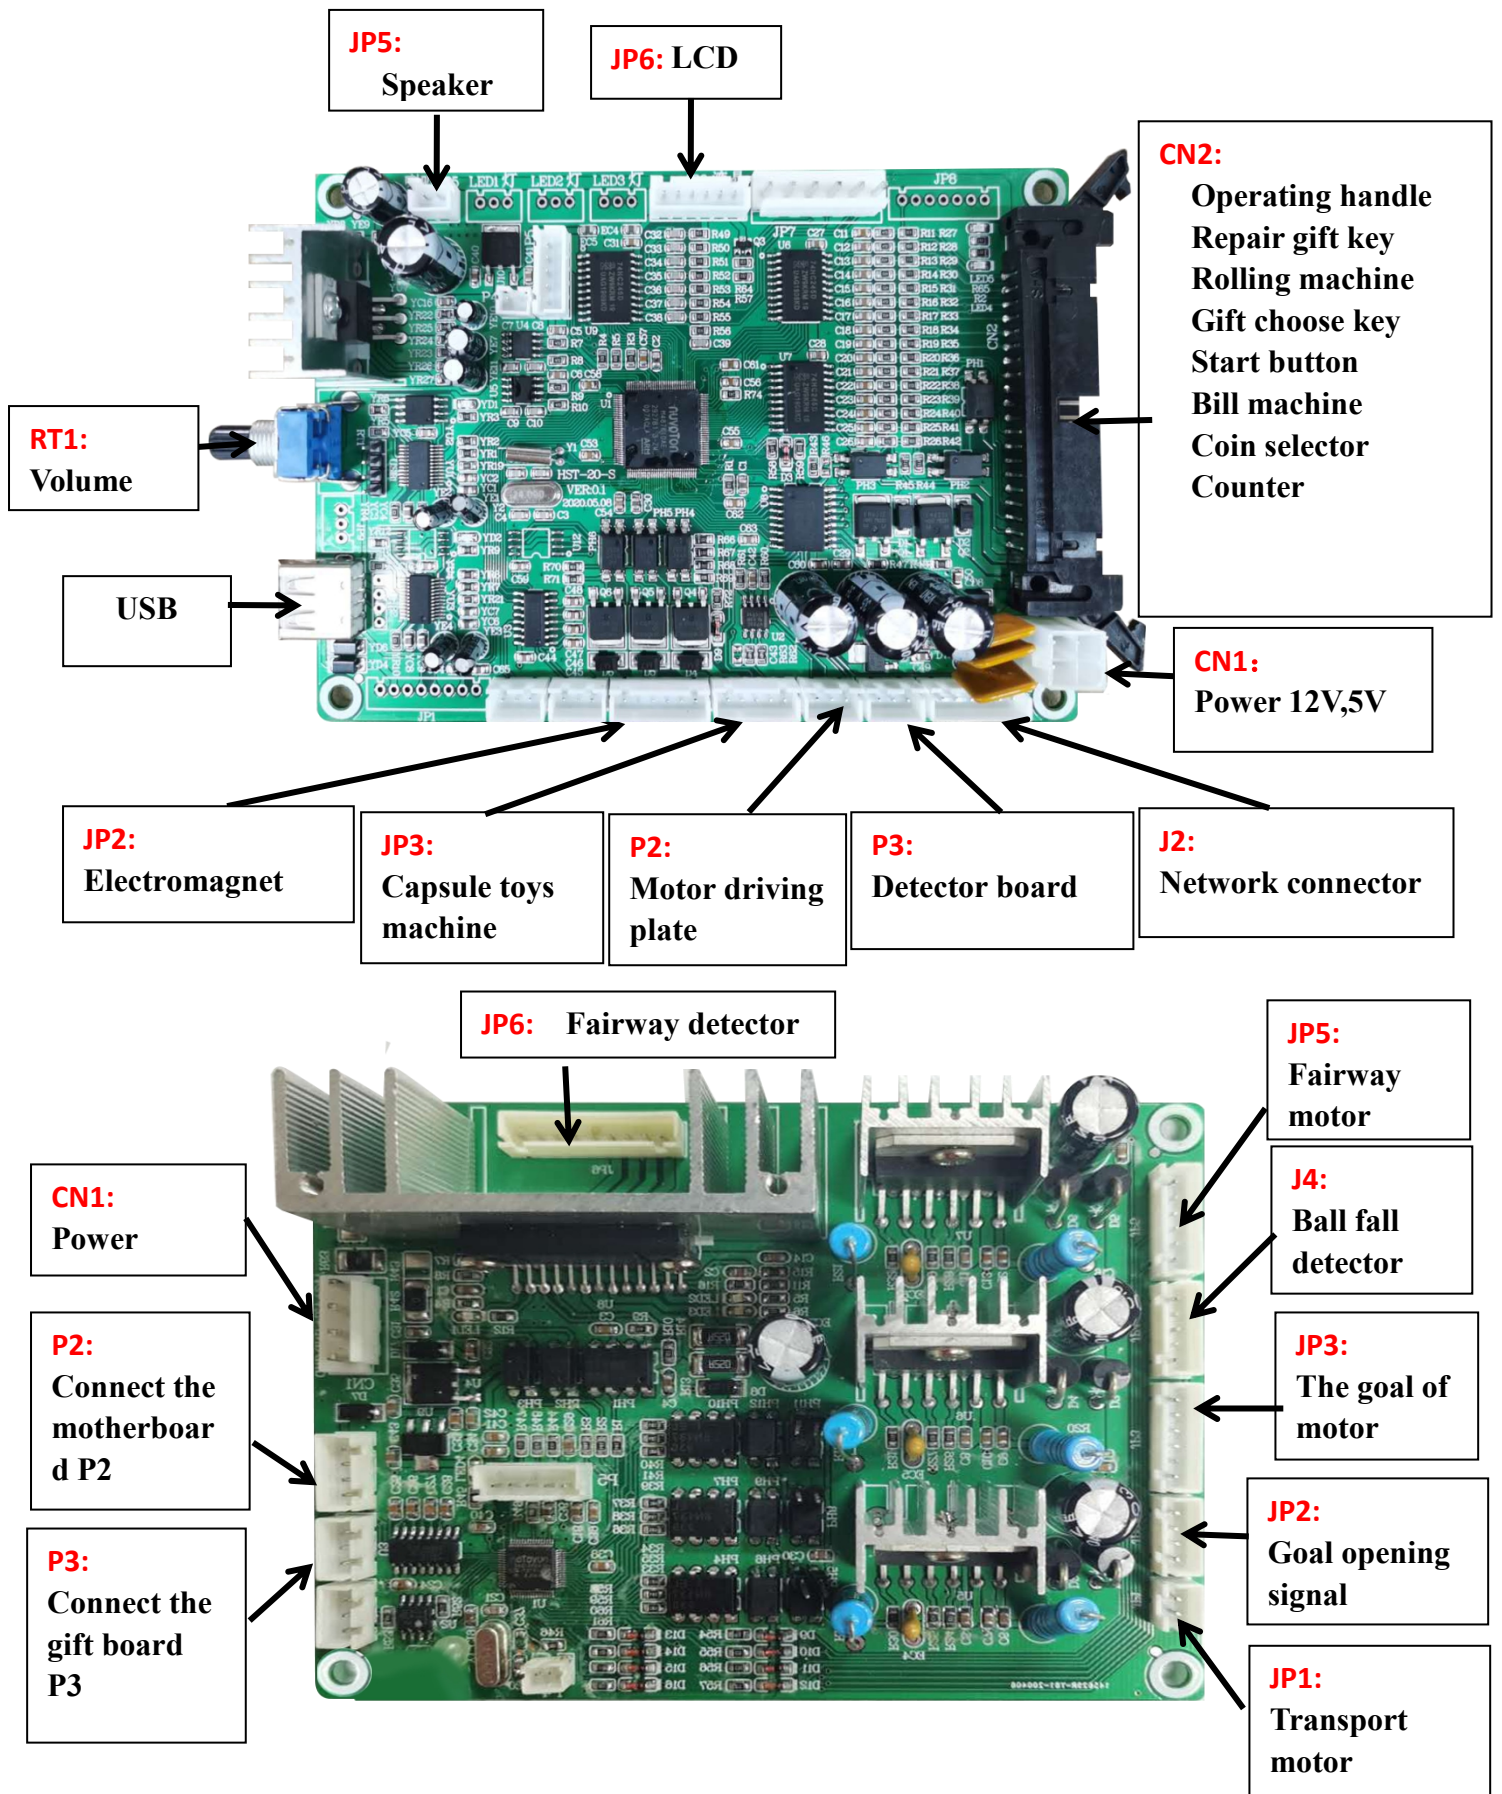

### 7.3 Gift box board wiring diagram

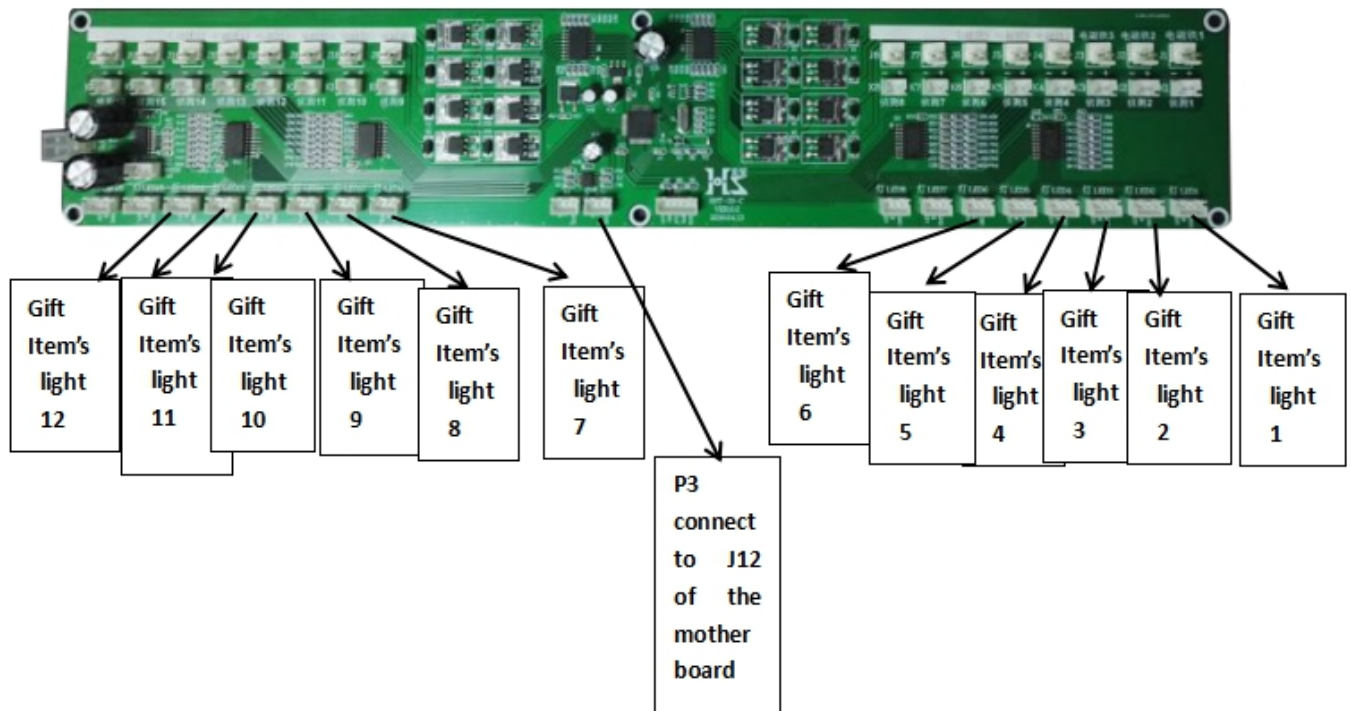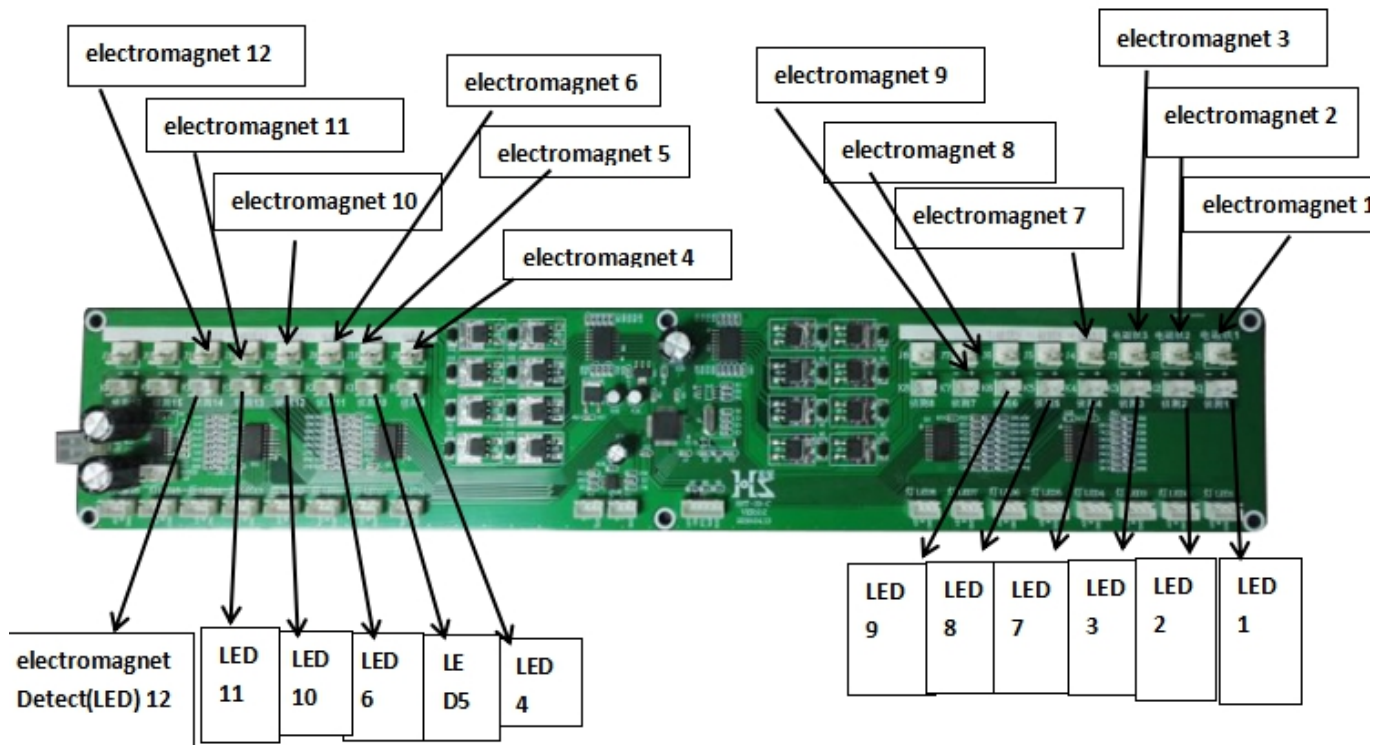

## 8. How to change demo music

If you want to change the DEMO music, The Main board USB unplug and then connected to the computer, Open USB file, 001.mp3, 002.mp3, 003.mp3, 004.mp3, music can be changed by request, but the file name and file format must be consistent with existing formats USB.

**Note: 01 folder cannot be changed.**





## 9. Error code

<b>Error</b>	<b>How to eliminate</b>
<b>Up Ball Error</b>	The ball cannot be transported. Check the upper ball motor
<b>Coin Error</b>	You need to turn the switch of the coin machine to NO
<b>Down Ball Error</b>	<ol style="list-style-type: none"> <li>1. The detector board did not detect the ball falling;</li> <li>2. The electromagnet did not open, the ball did not fall</li> </ol>
<b>Move Alarm....</b>	Restart the machine
<b>Total Error</b>	The revenue of the machine has reached the maximum of 60,000; You need to go into the background and clear account
<b>Fairway error</b>	<ol style="list-style-type: none"> <li>1. The motor of swinging fairway does not work, so the fairway does not move, check the motor;</li> <li>2. The detector board for detecting the swing of the fairway is broken, and it cannot detect whether the motor works. Check the detector board.</li> </ol>
<b>Grid Open Error</b>	<p>The door to the gift grid was not open.</p> <p>Replace the lock or check the wiring</p>
<b>No Capsule</b>	No more capsule toys
<b>No More Gift</b>	All the gifts in the gift box are gone

